

Disassembly.

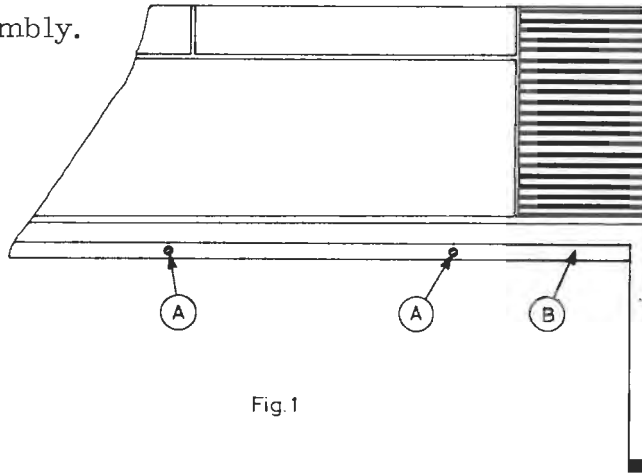


Fig. 1

1. Remove the screws marked A. Pull out the plugs from under the bottom. Now, using light pressure, push the radio section sufficiently far upwards to permit unplugging the speaker leads (5-contact DIN plugs). You may now pull the radio section entirely clear of the cabinet, following which the power plug may be pulled out.

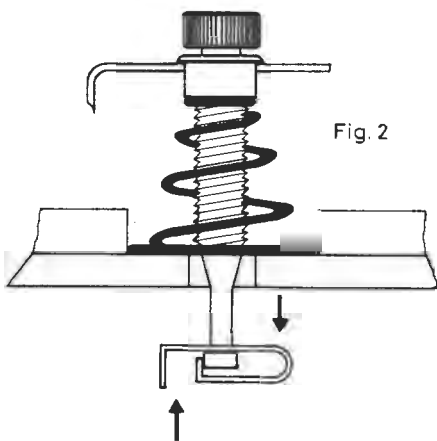


Fig. 2

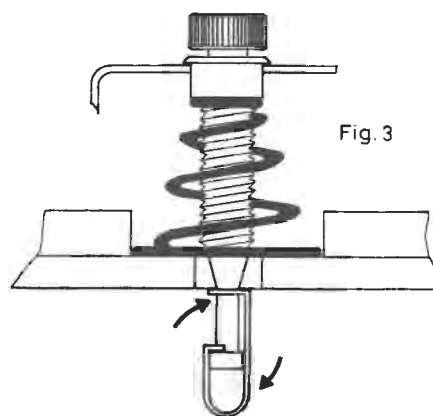


Fig. 3

2. To take out the gramophone section, turn the four spires on the transit screws in the direction of the arrow as shown in Figs. 2 and 3. The gramophone power flex is connected to the block under the motor.  
NOTE: The radio section must be removed before the gramophone section.
3. To remove the speaker grille, remove the screw marked B (see Fig. 1).